 
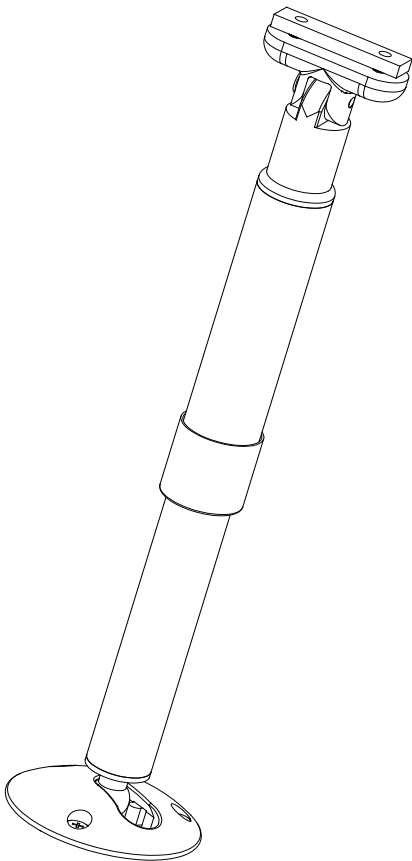 
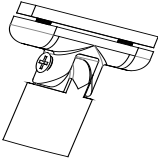 
 
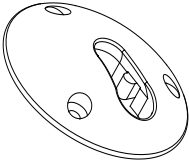 
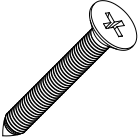 


Support pole Front bar

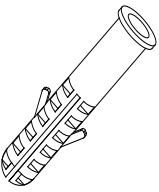


Components list

PARTS LIST	ILLUSTRATION	Quantity
Head part of front bar support for half cassette,		2
radius rod		2
the rod base		2
(ST4.8x40) Cross groove countersunk head self-tapping screw		3

(ST4.8×40)		
($\phi 8 \times 40$) Plastic expansion tube ($\phi 8 \times 40$)		3


Assembly diagram

 1、

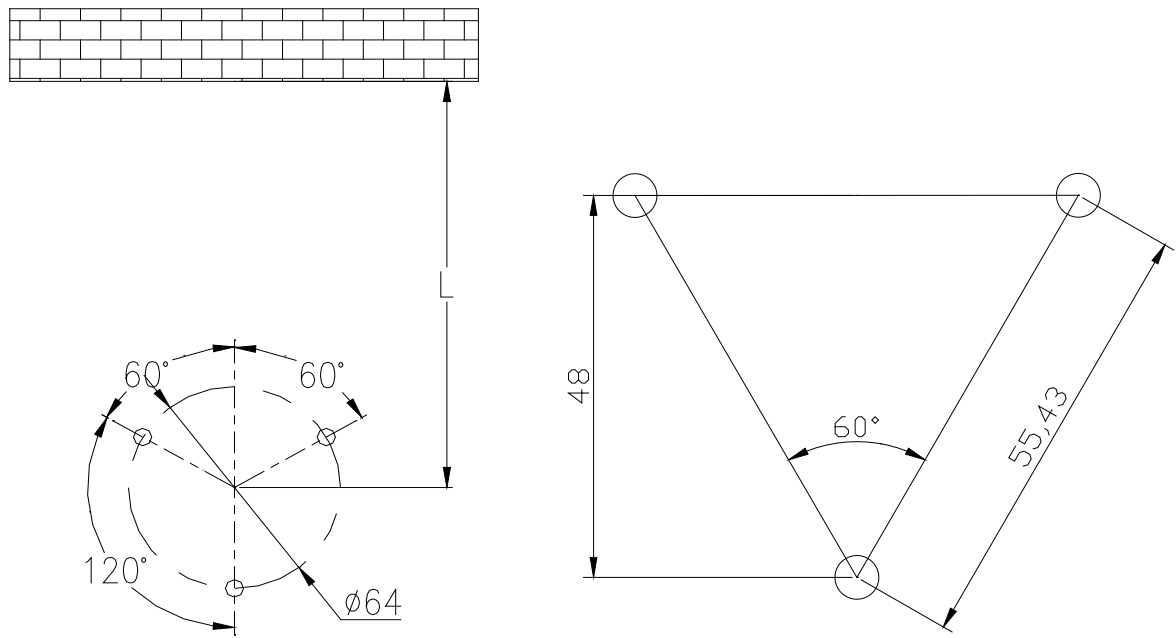


Make sure the Awning is projected. According to the assembly diagram, choose 3 points of the below part of the Awning's front bar.

 2、

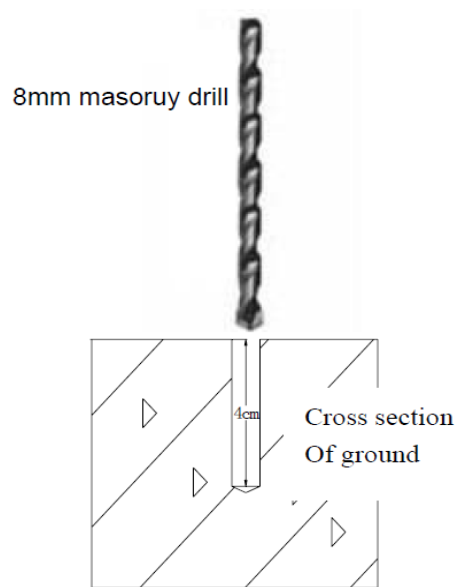


Drill 3 holes at 42mm-45mm deep.

3、

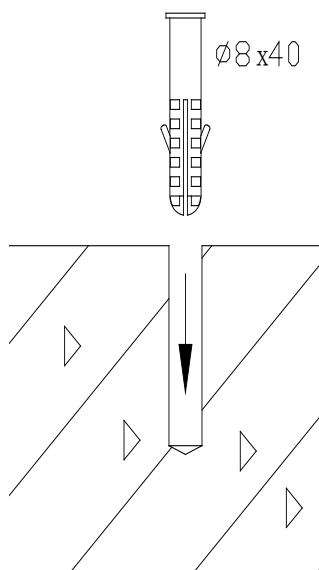


Install plastic expansion tubes into the 3 holes

4、

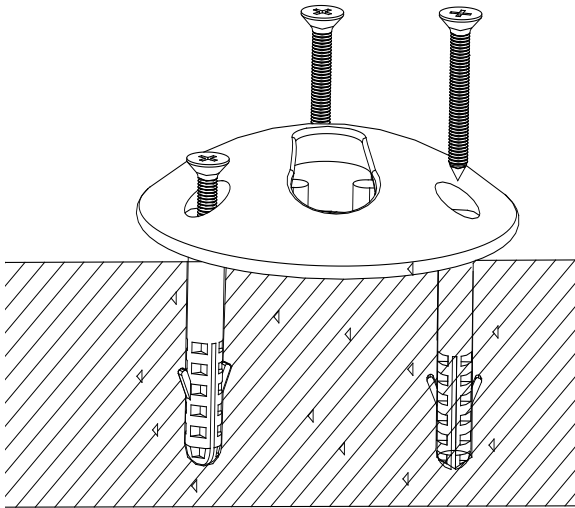


Align the three holes on the outside of the base to the three plastic expansion tubes on the ground and tighten them with three self-tapping screws clockwise.


5、

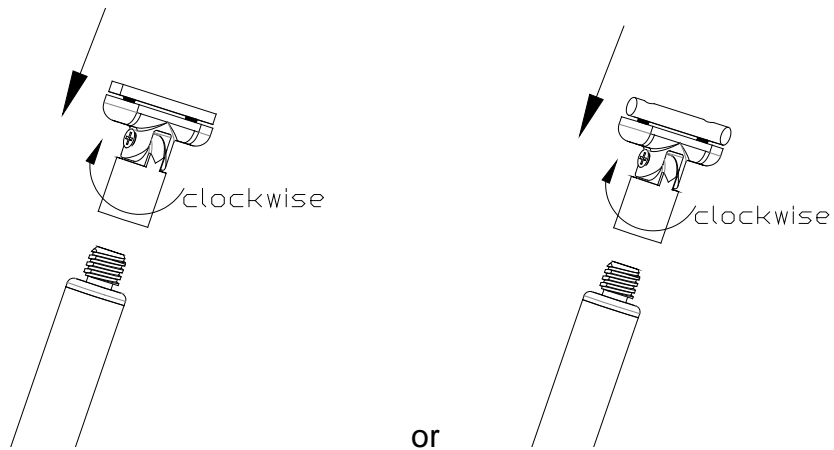

6、

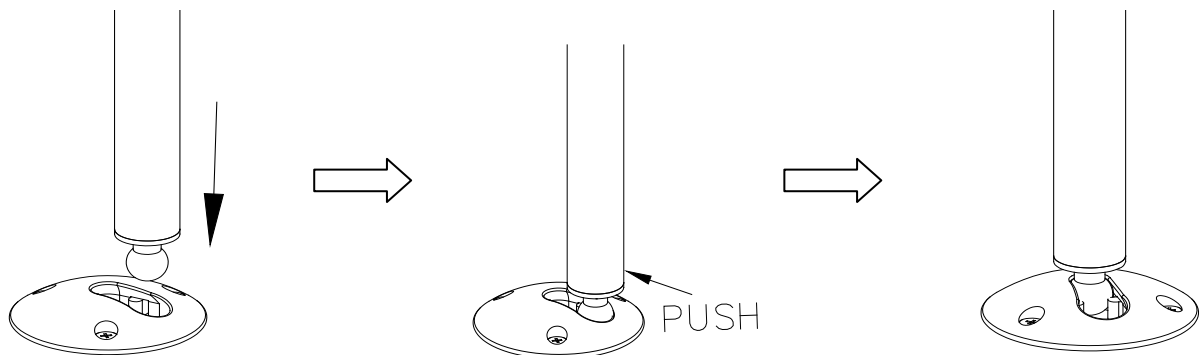

7、

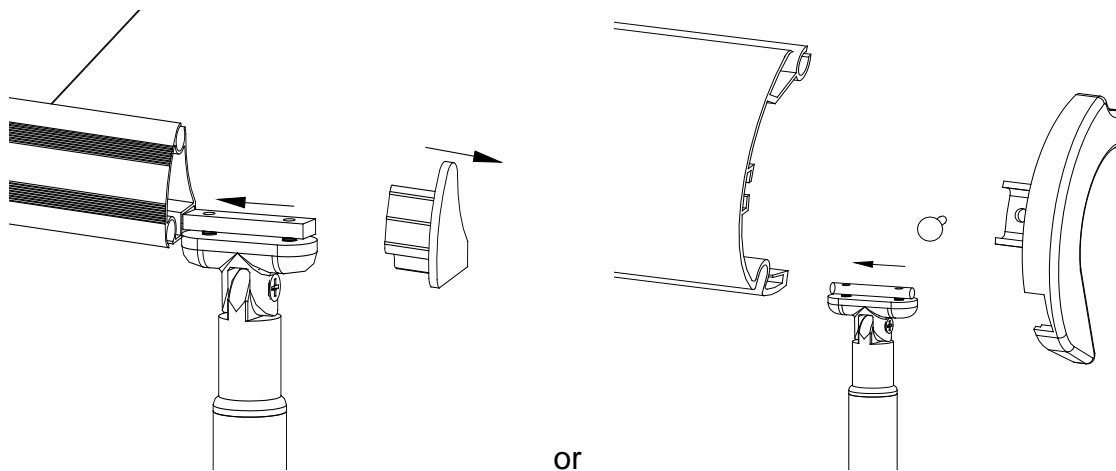


Tighten the screw of the fixed nut plate with the cross screwdriver, then knock back the plastic cover.

Note: These support poles are suitable for all Primrose awning models.
Must remove the valance on the front bar before installing the pole kit.

Square and round insert plates provided. Square plate is suitable for Budget, Standard and Half Cassette models. Round plate is suitable for Full cassette model.

8、 Adjust the height of the pole.

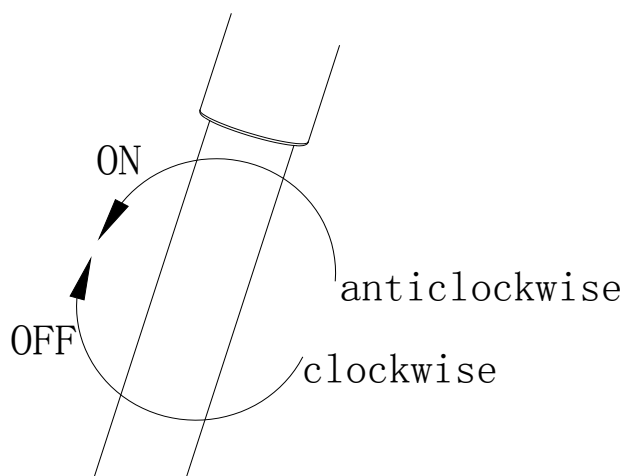

9、The finished assembly diagram

