

# **Instructions for Smart Wifi control kit**

## Wiring electrics




### LED Light (Awning)



- 1. V+ = Wire with white line
- V = Wire with transparent line

#### Motor (Awning)



- 3. L = Blue Wire
- U = Brown Wire
- D = Black Wire
- 6. = No Wire
- 7. E = Yellow and Green Wire

#### Mains (Power)

10 11 12

E = Yellow and Green Wire

= No Wire

Ε


10. N = Blue Wire

11. = No Wire

12. L = Brown Wire

## Setting up: Remote control

- Press "P2" on top of Wifi box (LED light flashes)
- Press "Stop" on top of Wifi box (LED light will flash brighter)
- Press "UP" on remote control zapper
- Device will bleep (Syncing with remote control)
- Setup is now complete





## Setting up: Smart device

- Download QR code scanner/reader on APP store
- Open QR reader and scan the correct QR code for Android
- Open link in browser, download APP "Awning"











- 5. Connection complete, click and use your awning If "Connection failed" appears, unplug mains power
- Delete and remove awning APP off all devices - Redownload and open APP, repeat steps 1,2,3

2. Press "START" button first on the APP

On the third time, hold for 10 seconds. 4. Smart box will bleep and start connecting



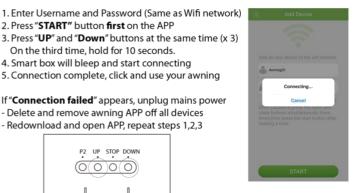

Note: If you've connected your device to the receiver box and then switch the mains power off. The awning will show "Device offline"

Switch the mains power back on, open the APP, you'll need to wait 60 - 120 seconds for the receiver box to connect with the APP. The awning will show "Device online".

If it's still showing "Device offline" Force Close and restart the APP (Don't delete/remove APP)

